FOR YOUR SAFETY

If you smell gas:
1. **Do not attempt to light appliance.**
2. **Extinguish any open flame.**
3. **Disconnect from fuel supply.**

FOR YOUR SAFETY

Do not store or use gasoline or other liquids with flammable vapors in the vicinity of this or any other appliance.

⚠ DANGER

CARBON MONOXIDE HAZARD

- **This appliance can produce carbon monoxide which has no odor.**
- **Using it in an enclosed space can kill you.**
- **Never use this appliance in an enclosed space such as a camper, tent, car or home.**

This manual contains important information about the assembly, operation and maintenance of this outdoor propane appliance. General safety information is presented on this page and is also located throughout these instructions. Particular attention should be paid to information accompanied by the safety alert symbol ⚠, "DANGER", "⚠WARNING", "⚠CAUTION".

Keep this manual for future reference and to educate new users of this product. This manual should be read in conjunction with the labeling on the product.

Safety precautions are essential when any mechanical or propane fueled equipment is involved. These precautions are necessary when using, storing, and servicing. Using this equipment with the respect and caution demanded will reduce the possibilities of personal injury or property damage.

The following symbols shown below are used extensively throughout these instructions. Always heed these precautions, as they are essential when using any mechanical or propane fueled equipment.

⚠ DANGER

DANGER indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.

⚠ WARNING

WARNING indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

⚠ CAUTION

CAUTION indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate personal injury, or property damage.

⚠ DANGER

Failure to comply with the precautions and instructions provided with these stoves can result in death, serious bodily injury and property loss or damage from hazards of fire, explosion, burn, asphyxiation, and/or carbon monoxide poisoning.

Only persons who can understand and follow the instructions should use or service these stoves.

If you need assistance or information such as an instruction manual or labels, contact The Coleman Company, Inc.

CALIFORNIA PROPOSITION 65:
WARNING: This fuel, and byproducts of combustion of this fuel, contain chemicals known to the state of California to cause cancer, birth defects, or other reproductive harm.

⚠ WARNING

- This product is fueled by propane gas. Propane gas is invisible, odorless, and flammable. An odorant is normally added to help detect leaks and can be described as a "rotten egg" smell. The odorant can fade over time so leaking gas is not always detectable by smell alone.
- Propane gas is heavier than air and leaking propane will sink to the lowest level possible. It can ignite by ignition sources including matches, lighters, sparks or open flames of any kind many feet away from the original leak. Use only propane gas set up for vapor withdrawal.
- Propane gas should be stored or used in compliance with local ordinances and codes or with ANSI/NFPA 58. Turn off propane when not in use.

⚠ DANGER

• EXPLOSION - FIRE HAZARD

- Never store propane near high heat, open flames, pilot lights, direct sunlight, other ignition sources or where temperatures exceed 120 degrees F (49°C).
- Propane is heavier than air and can accumulate in low places. If you smell gas, leave the area immediately.
- Never install or remove propane tank while outdoor stove is lighted, near flame, pilot lights, other ignition sources or while outdoor stove is hot to touch.
- During lighting and operation, this product can be a source of ignition. Never use the stove in spaces that contain or may contain volatile or airborne combustibles, or products such as gasoline, solvents, paint thinner, dust particles or unknown chemicals. Minimum clearances from combustible materials: 12 inches from the sides and 48 inches from the top.
- Provide adequate clearances around air openings into the combustion chamber.

⚠ WARNING

Not for home or recreational vehicle use.

We cannot foresee every use which may be made of our products.
Check with your local fire safety authority if you have questions about use.
Other standards govern the use of fuel gases and heat producing products for specific uses. Your local authorities can advise you about these.
- Never refill disposable cylinders.
- Use the preset regulator that came with the stove. Do not attempt to adjust.
- Use only Coleman® accessories or parts. During stove set-up, check all fittings for leaks using soapy water. Never use a flame.

⚠ WARNING

• BURN HAZARD
- Never leave stove unattended when hot or in use.
- Keep out of reach of children.

⚠ DANGER

• CARBON MONOXIDE HAZARD
- This stove is a combustion appliance. All combustion appliances produce carbon monoxide (CO) during the combustion process. This product is designed to produce extremely minute, non-hazardous amounts of CO if used and maintained in accordance with all warnings and instructions. Do not block air flow into or out of the stove.
- Carbon Monoxide (CO) poisoning produces flu-like symptoms, watery eyes, headaches, dizziness, fatigue and possibly death. You can't see it and you can't smell it. It's an invisible killer. If these symptoms are present during operation of this product **get fresh air immediately!**
- **For outdoor use only.**
- **Never use inside house, camper, tent, vehicle or other unventilated or enclosed areas. This stove consumes air (oxygen). Do not use in unventilated or enclosed areas to avoid endangering your life.**

⚠ CAUTION

• SERVICE SAFETY
- Keep all connections and fittings clean. Inspect propane cylinder and stove propane connections for damage before attaching.
- During set up, check all connections and fittings for leaks using soapy water. Never use a flame. Bubbles indicate a leak. Check that the connection is not cross-threaded and that it is tight. Perform another leak check. If there is still a leak, remove the cylinder and contact Coleman for service or repairs.
- Use as a cooking appliance only. Never alter in any way or use with any device or part not expressly approved by Coleman.
- Clean stove frequently to avoid grease accumulation and possible grease fires.

Technical Characteristics

Input (5469- Series): 10,000 BTU/H per burner
Input (5469A Series): 11,000 BTU/H per burner
Category: Pressure regulated propane
Fuel: 16.4 oz. disposable propane cylinders
Regulator: 5430

To Set Up

⚠ DANGER

• CARBON MONOXIDE HAZARD
- For outdoor use only.
- Never use inside house, camper, tent, vehicle or other unventilated or enclosed areas. This stove consumes air (oxygen). Do not use in unventilated or enclosed areas to avoid endangering your life.

■ NOTE: Use Coleman 16.4 oz. disposable propane cylinders. The LP-gas cylinder(s) used with stoves must be constructed and marked in accordance with the specifications for LP-gas cylinders of the U.S. Department of Transportation or *Transport Canada, CAN/CSA B339.*

■ Remove components from carton. (Fig. 1)

Fig. 1

■ To open the lid, press the latch release located above the handle. (Fig. 2)

Fig. 2

■ Position windguards as desired. (Fig. 3)

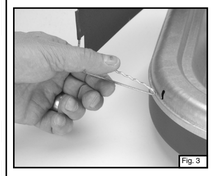
Fig. 3

■ Install pot support as shown. (Fig. 4)

Fig. 4

■ Close both burner valves firmly. (Fig. 5)

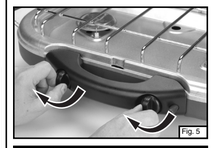
Fig. 5

⚠ CAUTION

• SERVICE SAFETY
- Keep all connections and fittings clean. Inspect propane cylinder and stove propane connections for damage before attaching.
- During set up, check all connections and fittings for leaks using soapy water. Bubbles indicate a leak. Never use a flame.

■ Screw regulator into stove hand tight. (Fig. 6)
■ Remove plastic cap from top of propane bottle and screw propane bottle into regulator hand tight. (Fig. 7)


Fig. 6 Fig. 7

■ Propane cylinder correctly installed. (Fig. 8)
■ Never operate stove with propane cylinder in an inverted position. (Fig. 9)

Fig. 8 Fig. 9

Leak Check

⚠ WARNING

- Perform leak test outdoors.
- Extinguish all open flames.
- NEVER leak test when smoking.
- Do not use the outdoor stove until connection has been leak tested and does not leak.

To Light

⚠ DANGER

• EXPLOSION - FIRE HAZARD
- Propane is heavier than air and can accumulate in low places. If you smell gas, leave the area immediately.
- Always attach or detach propane source outdoors; never while stove is lighted, near flame, pilot lights, other ignition sources or while stove is hot to touch.
- This stove is red hot during use and can ignite flammables too close to the burners. Keep flammables at least 12 inches from the sides and 48 inches from the top of the stove. Keep gasoline and other flammable liquids and vapors well away from stove.
- The stove must not be exposed to flammable vapors or liquids during lighting.

⚠ WARNING

• BURN HAZARD
- Never leave stove unattended when hot or in use.
- Keep out of reach of children.

Standard ignition stoves
■ Set on sturdy, flat surface. **For outdoor use only.**
■ Hold lighted match near burner and open burner valve. (Fig. 10 and Fig. 11)

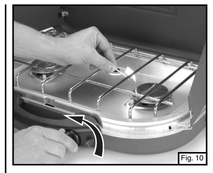
Fig. 10

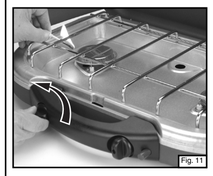
Fig. 11

INSTASTART™ Electronic Ignition Stoves
■ Set on sturdy, flat surface. **For outdoor use only.**
■ Open burner valve to the red ignition setting mark (Fig. 12) and push igniter button repeatedly until burner lights (Fig. 13 and 14).
Note: If igniter fails to light stove, use match to light burner. If the stove is wet the igniter may not spark.

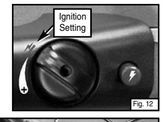

Fig. 12

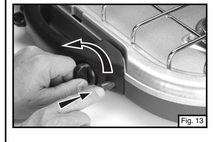
Fig. 13

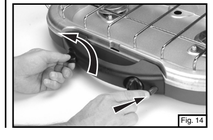
Fig. 14

■ Adjust flame with burner valve. (Fig. 15) Flame should be blue with a hint of yellow on tips.

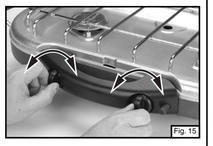
Fig. 15

To Turn Off

■ Close both burner valves firmly. (Fig. 16)

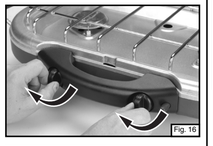
Fig. 16

To Clean

■ Make sure stove is cool.
■ Move stove away from flame (including pilot lights) and other ignition sources.
■ Remove propane cylinder from regulator and replace protective cap on cylinder. (Fig. 17)
■ Remove regulator from stove. (Fig. 18)

Fig. 17 Fig. 18

• MAINTENANCE
- Keep stove area clear and free from combustible materials, gasoline and other flammable vapors and liquids.
- Do not obstruct the flow of combustion and ventilation air.
- A good flame should be blue with minimal yellow tip. Some yellow tips on flames are acceptable as long as no carbon or soot deposits appear.
- Wipe clean with soft cloth and mild dish detergent. Do not use abrasives. (Fig. 19)

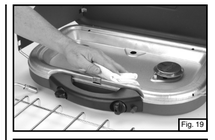
Fig. 19

To Store

⚠ DANGER

• EXPLOSION - FIRE HAZARD
- Never store propane near high heat, open flames, pilot lights, direct sunlight, other ignition sources or where temperatures exceed 120 degrees F (49°C).
- The cylinder must be disconnected when the stove is in storage.

■ For storage or transport, the regulator may be located below the pot support. (Fig. 20)

Fig. 20

■ To carry the stove, firmly grasp the stove by the handle. (Fig. 21)

Fig. 21

Things You Should Know

1. It is unsafe and illegal in some places to store or use propane cylinders of greater than 1.14 kg (2.5 lbs) water capacity (approximately 1 lb. propane) in occupied enclosures.
2. The usual storage areas for camping and picnic equipment are the basement, attic, or garage. To avoid the accumulation of dust, cobwebs, etc., that is common in these areas, place your stove in a plastic bag and seal it with a rubber band.
3. For repair service call one of the numbers on the front cover for location of your nearest Coleman Service Center. If a service center is not conveniently located, attach to the product a tag that includes your name, address, daytime telephone number and description of the problem. Carefully package the product and send either by **courier** or **insured mail** with shipping and **insurance** prepaid to:

For products purchased in the United States:
The Coleman Company, Inc.
3600 North Hydraulic
Wichita, KS 67219

For products purchased in Canada:
Sunbeam Corporation (Canada) Limited
DBA Jarden Consumer Solutions
209 Hereford Street
Brampton, ON L6Y 0M1

4. If not completely satisfied with the performance of this product, please call 1-800-835-3278 in the US or 1 800 387-6161 in Canada.
www.coleman.com

Parts List

No.	Part Number	Description
1	5469-5401	Grate
2	5469-5321	Burner Assembly (1 pk)
3	5430-5651	Regulator Assembly
4	5469-1511	Knob & Screw (1 pk)

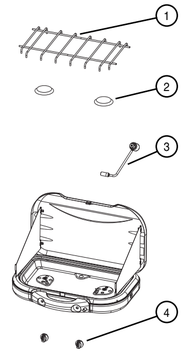

Continued on English-7

Assemblage

⚠ DANGER

- **RISQUE D'INTOXICATION OXYCARBONÉE**

Tous les appareils à combustion génèrent du monoxyde de carbone (CO). Cet appareil est conçu pour produire des quantités infimes et non-dangereuses de CO si il est employé et entretenu correctement. Assurez-vous que l'air n'est jamais entravé vers la écrland ou à partir du extérieur.

- Les symptômes de l'intoxication oxycarbonée rappellent la grippe : yeux larmoyants, maux de tête, vertiges, fatigue, nausée et vomissements. Si ces symptômes lors de l'utilisation de l'appareil, **allez immédiatement au grand air.**
- **Cet appareil est uniquement destiné à l'air libre.**
- **N'utilisez jamais à l'intérieur ou dans des pièces fermées ou sans ventilation – il consume l'oxygène de l'air. Pour ne pas risquer de mettre votre vie en danger, ne l'utilisez jamais dans habitacles ou autres endroits sans ventilation ou fermés.**

⚠ ATTENTION

• PAR MESURE DE SÉCURITÉ
- Gardez connexions et raccordements immaculées. Examinez les raccords de la bouteille de propane et de raccord à propane pour déceler tout dommage avant la connexion.
- Ne pas fumer à proximité de fuites. Des fuites signalent une fuite. Assurez-vous que la connexion ne soit pas lussée et qu'elle soit serrée à fond. Faites une nouvelle vérification à l'eau savonneuse. S'il fuite persiste, éloignez la bouteille et entrez en rapport avec Coleman pour de dépannage ou la réparation.
- N'employez le écrlaud que pour usage prévu. Ne modifiez ouvrant le écrlaud pour usage autre que sa écrumulé par le écrlaud pour usage.
- Nettoyez souvent le écrlaud pour les graisse ns écrumulé par le écrlaud pour usage.

⚠ AVERTISSEMENT

- Ne mettez jamais le propane près de la chaleur, des flammes, de vetillesses, aux rayons directs du soleil, d'une source d'inflammation, ou dans un endroit de rangement de plus de 49 °C (120 °F).
- Plus lourd que l'air, le propane s'accumule au ras du sol. Si vous sentez le gaz,
- Le écrlaud peut être une source d'inflammation pendant l'éclairage et quand il fonctionne. Ne l'utilisez pas dans un espace contenant ou pouvant contenir des substances combustibles volátiles ou en suspension dans l'air, ainsi que des produits tels que essence, solvants, dissolvants, peintures à écrlaud. Gardez ces produits à au moins 0,3 m (1 pi) des côtés et 1,2 m (4 pi) des sources de l'appareil.
- Prévoyez des dégagements convenables autour des sources d'air dans la chambre de combustion.

⚠ AVERTISSEMENT

- Ne convient pas à l'utilisation dans maisons ou véhicules de plaisance.
- Il est impossible de prévoir toutes les utilisations auxquelles pourrait être soumis notre produits.
Consultez les autorités de sécurité incendie pour toute question quant à l'utilisation.
- D'autres normes régissent l'utilisation des produits ou dispositifs au gaz. Renseignez-vous auprès des autorités compétentes vous renseignement.
- N'essayez jamais de recharger les bouteilles de gaz jetables.
- Essayez-vous du régulateur prévu d'origine livré. Ne tentez pas de l'ajuster.
- Ne vous servez que d'accessoires ou pièces Coleman® pour de rechange. À la mise en service, vérifiez l'étanchéité de tous les raccords à l'eau savonneuse, jamais avec une flamme.

⚠ AVERTISSEMENT

- **RISQUE DE BRÛLURES**
- Ne laissez pas le écrlaud sans surveillance à l'air libre, quand il fonctionne ou est chaud.
- Gardez le écrlaud hors de la portée des enfants.

Caractéristiques techniques

Puissance nominale (séries 5469-) : 10 000 BTU/H par brûleur
Puissance nominale (séries 5469A) : 11 000 BTU/H par brûleur
Catégorie : Propane à pression régulière
Alimentation : Bouteilles jetables de 465 g/16,4 oz
Régulateur : 5430

■ Positionnez les pare-vent au besoin. (Fig. 3)

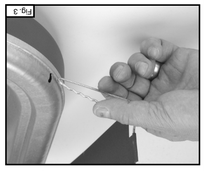
Fig. 3

■ Installez le support de casserole comme illustré. (Fig. 4)

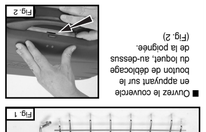
Fig. 4

■ Ouvrez le couvercle du loquet, puis dégagez la boucle de déblocage (fig. 2)

Fig. 2

■ Sortez les éléments de l'emballage. (Fig. 1)

Fig. 1

⚠ DANGER

• RISQUE D'EXPLOSION ET D'INCENDIE
- Ne rangez jamais le propane près de la chaleur, des flammes, de vetillesses, aux rayons directs du soleil, d'une source d'inflammation, ou dans un endroit de rangement de plus de 49 °C (120 °F).
- Plus lourd que l'air, le propane s'accumule au ras du sol. Si vous sentez le gaz,
- Ne tuez ou débranchez jamais la bouteille de gaz quand le écrlaud est allumé, près des flammes, vetillesses, etc., ou si il est chaud au toucher.
- Le écrlaud peut être une source d'inflammation pendant l'éclairage et quand il fonctionne. Ne l'utilisez pas dans un espace contenant ou pouvant contenir des substances combustibles volátiles ou en suspension dans l'air, ainsi que des produits tels que essence, solvants, dissolvants, peintures à écrlaud. Gardez ces produits à au moins 0,3 m (1 pi) des côtés et 1,2 m (4 pi) des sources de l'appareil.
- Prévoyez des dégagements convenables autour des sources d'air dans la chambre de combustion.

⚠ AVERTISSEMENT

- Ne convient pas à l'utilisation dans maisons ou véhicules de plaisance.
- Il est impossible de prévoir toutes les utilisations auxquelles pourrait être soumis notre produits.
Consultez les autorités de sécurité incendie pour toute question quant à l'utilisation.
- D'autres normes régissent l'utilisation des produits ou dispositifs au gaz. Renseignez-vous auprès des autorités compétentes vous renseignement.
- N'essayez jamais de recharger les bouteilles de gaz jetables.
- Essayez-vous du régulateur prévu d'origine livré. Ne tentez pas de l'ajuster.
- Ne vous servez que d'accessoires ou pièces Coleman® pour de rechange. À la mise en service, vérifiez l'étanchéité de tous les raccords à l'eau savonneuse, jamais avec une flamme.

⚠ AVERTISSEMENT

- Ne laissez pas le écrlaud sans surveillance à l'air libre, quand il fonctionne ou est chaud.
- Gardez le écrlaud hors de la portée des enfants.

Caractéristiques techniques

Puissance nominale (séries 5469-) : 10 000 BTU/H par brûleur
Puissance nominale (séries 5469A) : 11 000 BTU/H par brûleur
Catégorie : Propane à pression régulière
Alimentation : Bouteilles jetables de 465 g/16,4 oz
Régulateur : 5430

■ Positionnez les pare-vent au besoin. (Fig. 3)

Fig. 3

■ Installez le support de casserole comme illustré. (Fig. 4)

Fig. 4

■ Ouvrez le couvercle du loquet, puis dégagez la boucle de déblocage (fig. 2)

Fig. 2

■ Sortez les éléments de l'emballage. (Fig. 1)

Fig. 1

Assemblage

⚠ DANGER

- **RISQUE D'INTOXICATION OXYCARBONÉE**

Tous les appareils à combustion génèrent du monoxyde de carbone (CO). Cet appareil est conçu pour produire des quantités infimes et non-dangereuses de CO s'il est employé et entretenu correctement. Assurez-vous que l'air n'est jamais entravé vers la écrlaud ou à partir du écrlaud.

- Les symptômes de l'intoxication oxycarbonée rappellent la grippe : yeux larmoyants, maux de tête, vertiges, fatigue, nausée et vomissements. Si ces symptômes lors de l'utilisation de l'appareil, **allez immédiatement au grand air.**
- **Cet appareil est uniquement destiné à l'air libre.**
- **N'utilisez jamais à l'intérieur ou dans des pièces fermées ou sans ventilation – il consume l'oxygène de l'air. Pour ne pas risquer de mettre votre vie en danger, ne l'utilisez jamais dans habitacles ou autres endroits sans ventilation ou fermés.**

⚠ ATTENTION

• PAR MESURE DE SÉCURITÉ
- Gardez connexions et raccordements immaculées. Examinez les raccords de la bouteille de propane et de raccord à propane pour déceler tout dommage avant la connexion.
- Ne pas fumer à proximité de fuites. Des fuites signalent une fuite. Assurez-vous que la connexion ne soit pas lussée et qu'elle soit serrée à fond. Faites une nouvelle vérification à l'eau savonneuse. S'il fuite persiste, éloignez la bouteille et entrez en rapport avec Coleman pour de dépannage ou la réparation.
- N'employez le écrlaud que pour usage prévu. Ne modifiez ouvrant le écrlaud pour usage autre que sa écrumulé par le écrlaud pour usage.
- Nettoyez souvent le écrlaud pour les graisse ns écrumulé par le écrlaud pour usage.

⚠ DANGER

• RISQUE D'EXPLOSION ET D'INCENDIE
- Ne rangez jamais le propane près de la chaleur, des flammes, de vetillesses, aux rayons directs du soleil, d'une source d'inflammation, ou dans un endroit de rangement de plus de 49 °C (120 °F).
- Plus lourd que l'air, le propane s'accumule au ras du sol. Si vous sentez le gaz,
- Ne tuez ou débranchez jamais la bouteille de gaz quand le écrlaud est allumé, près des flammes, vetillesses, etc., ou si il est chaud au toucher.
- Le écrlaud peut être une source d'inflammation pendant l'éclairage et quand il fonctionne. Ne l'utilisez pas dans un espace contenant ou pouvant contenir des substances combustibles volátiles ou en suspension dans l'air, ainsi que des produits tels que essence, solvants, dissolvants, peintures à écrlaud. Gardez ces produits à au moins 0,3 m (1 pi) des côtés et 1,2 m (4 pi) des sources de l'appareil.
- Prévoyez des dégagements convenables autour des sources d'air dans la chambre de combustion.

⚠ AVERTISSEMENT

- Ne convient pas à l'utilisation dans maisons ou véhicules de plaisance.
- Il est impossible de prévoir toutes les utilisations auxquelles pourrait être soumis notre produits.
Consultez les autorités de sécurité incendie pour toute question quant à l'utilisation.
- D'autres normes régissent l'utilisation des produits ou dispositifs au gaz. Renseignez-vous auprès des autorités compétentes vous renseignement.
- N'essayez jamais de recharger les bouteilles de gaz jetables.
- Essayez-vous du régulateur prévu d'origine livré. Ne tentez pas de l'ajuster.
- Ne vous servez que d'accessoires ou pièces Coleman® pour de rechange. À la mise en service, vérifiez l'étanchéité de tous les raccords à l'eau savonneuse, jamais avec une flamme.

⚠ AVERTISSEMENT

- Ne laissez pas le écrlaud sans surveillance à l'air libre, quand il fonctionne ou est chaud.
- Gardez le écrlaud hors de la portée des enfants.

Caractéristiques techniques